


“Always respect your environment and the sport of fishing. Never look down the barrel and never point the Rocket Fishing Rod™ at someone else.”

Roland Martin
“Fishing With Roland Martin”

Reeling and Casting

To Launch Bobber:


- 1 Pull handle from the very tip to as far back as it will go.
- 2 Reel in the Bobber until you see it appear in the view window.
- 3 Push the safety on the left side of the Rocket Fishing Rod™ and press down reel cover to launch.

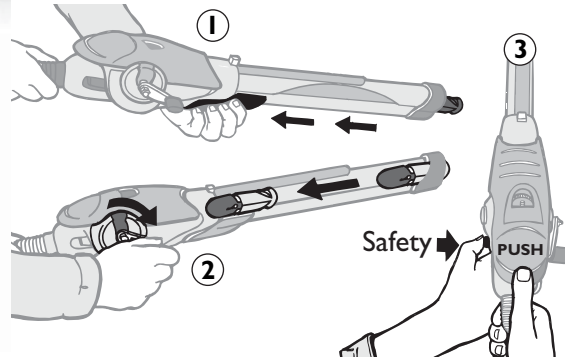

Setting Up The Safety Bobber

Recommended Hook Size: 4
Recommended Weight Size: 8


- 1 Tie on a weight and a hook.
- 2 Put your bait on the hook.
- 3 Entire hook must go back inside the bobber when pulled tight!
- 4 Adjust line stop for desired fishing depth.

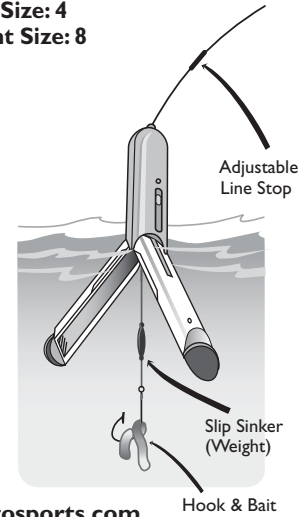

www.fogosports.com

Safety Bobber

Set hook and bait inside bobber.

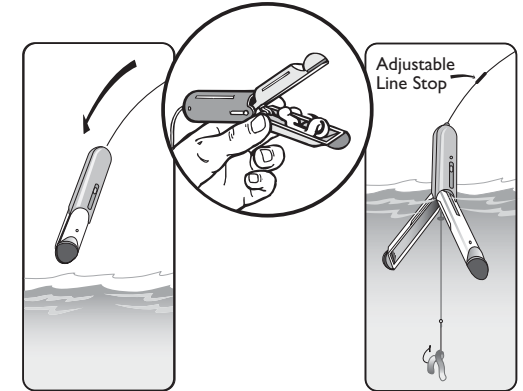


Bobber opens and releases bait automatically upon hitting the water.

www.fogosports.com

Adjusting the Reel Drag


Adjust the drag wheel to get the settings just right for the fish you'll be catching.

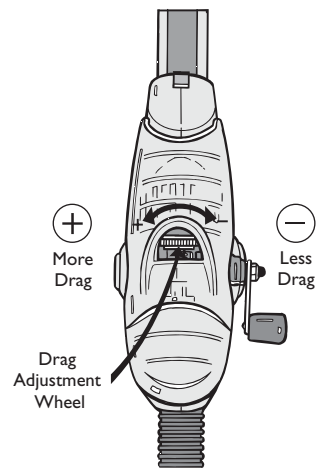

www.fogosports.com

Removing the Reel.

Open the black door and pull the reel straight up.

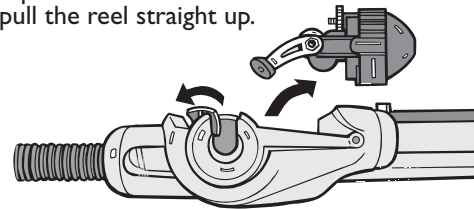

Restringing New Bobber

- 1 Attach a weight to the fishing line.
- 2 Pull the handle back so the Rocket Fishing Rod™ is ready to fire.
- 3 Drop the weighted line down the barrel.
- 4 Tie on new bobber with hook and weight.

www.fogosports.com

Troubleshooting

The line is not reeling in.	Hold the line tight in your left hand while reeling in with your right. There needs to be tension on the line for the reel to work.
The line gets tangled inside the Rocket Fishing Rod™.	If this happens, try pulling on the line from the tip while moving the handle up and down the barrel. If this doesn't work cut the line.
The line gets tangled in the reel.	This is a problem all fishermen have. Ask a parent for help. The silver cover can be removed from the Reel with pliers if the line is tangled inside.
The bobber is only launching a few feet.	Make sure the line is not tangled inside the barrel. Try taking the case off the reel and putting it back on again.

www.fogosports.com

WARNING:

Do not aim or launch in direction of people or pets. Do not insert foreign objects. Not a toy for children. May cause serious injury. Read instructions carefully. **Not for use by children under 6 years of age.** Use only with adult supervision.

Roland Martin Rocket Fishing Rod™ is a trademark of Spin Master Ltd.
© 2005 Spin Master Ltd.
All Rights Reserved.
Made in China.

Spin Master Ltd. 450 Front Street West
Toronto, ON M5V 1B6 Canada
Ph: 1 800 622-8339
Web: www.spinmaster.com
Item #69011 REV 6



www.fogosports.com