




The Wacky Wiggling Dancing Guitar Instruction Sheet

READ ALL INSTRUCTIONS CAREFULLY PRIOR TO USING YOUR WIGGLES GUITAR.
PARENTAL SUPERVISION IS RECOMMENDED FOR BATTERY INSTALLATION.

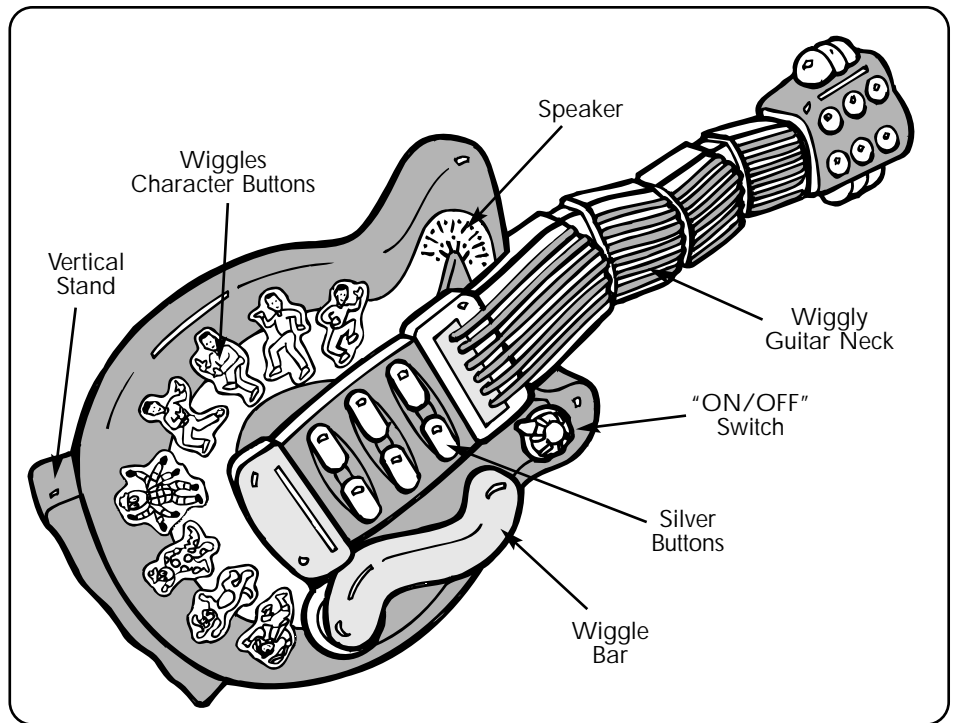

BATTERY INSTALLATION

1. Use a phillips screwdriver (not provided) to loosen the battery compartment door and hold down screws. Remove the battery compartment door.
2. Install four 1.5-Volt "AA" alkaline batteries (not included). Be careful to align the positive (+) and (-) polarities with the corresponding markings inside the battery compartment.
3. Replace the battery compartment door and refasten the screws.


IMPORTANT BATTERY INFORMATION

Be sure to insert the batteries as indicated inside compartment with the correct polarity as indicated.

- Battery installation should be performed by an adult.
- Use only batteries recommended.
- Be careful to install the batteries with the correct polarity, as indicated.
- Do NOT mix old and new batteries.
- Do NOT mix alkaline, standard (carbon zinc), rechargeable (nickel-cadmium) batteries or different types of batteries.
- Alkaline batteries are recommended.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do NOT attempt to charge non-rechargeable batteries.
- Do NOT short circuit the supply terminals.
- Exhausted batteries are to be removed, as they will adversely affect the performance of the toy.
- Please retain this information for future use.

CAUTION: Do not dispose of batteries in fire.
Batteries may leak or explode.


- Non-rechargeable batteries are not to be charged.
- Re-chargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

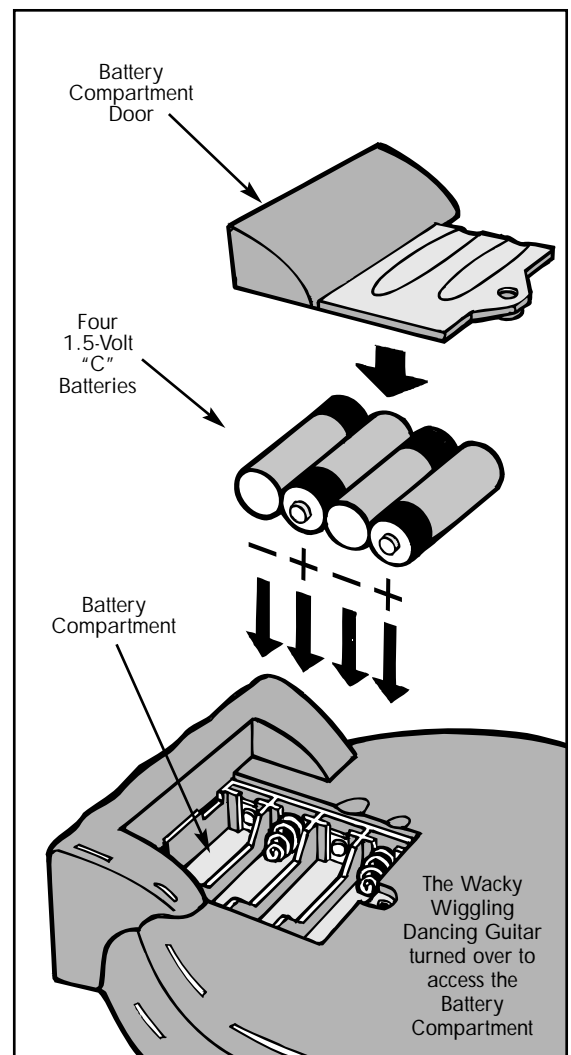

GUITAR PLAYING INSTRUCTIONS ON FOLLOWING PAGES


"ON"/"OFF" - Volume Switch

The Yellow Knob on the Wiggles Guitar is used to turn the guitar "ON" and "OFF" and for **Volume Control**.

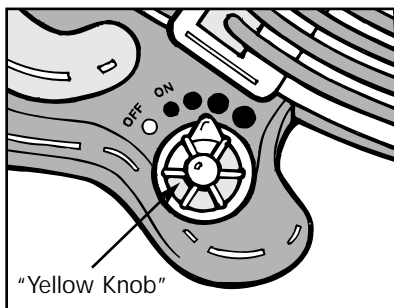


Turning Your Wiggles Guitar "ON"

Turn the Yellow Knob to the right to turn the guitar "ON". When the switch is turned "ON" you will hear "Get Ready to Wiggle".

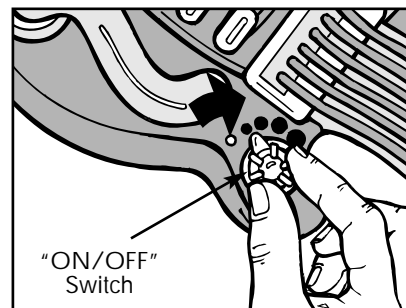


Turning Your Wiggles Guitar "OFF"

Turn the Yellow Knob to the left to turn the guitar "OFF".

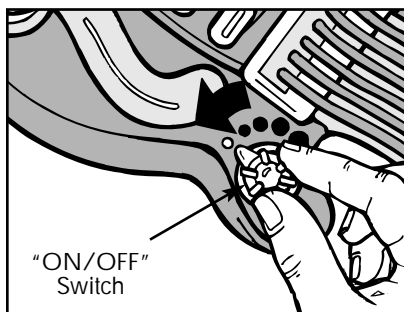


Volume Control

Once you have turned the Guitar "ON", continue turning the Yellow Knob to adjust the **Volume**.

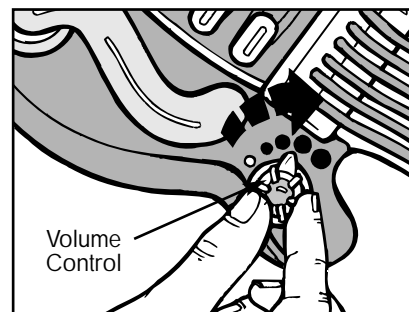


Play Along (Playing the Guitar in Normal Mode)

Turn the Yellow Knob to the "ON" position.

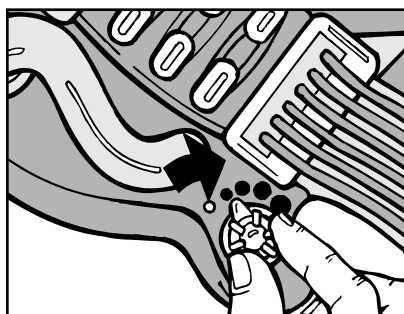


Press any of the **8 Wiggles Characters** to hear your favorite **Wiggly Songs!**

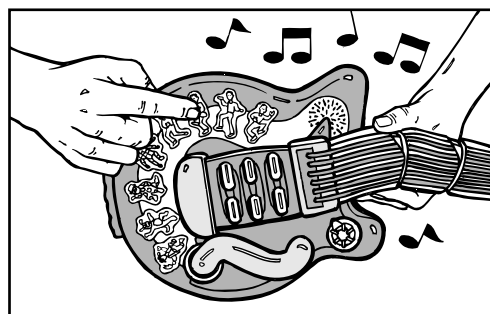

Press any of the **6 Silver Buttons** to add **Wacky Wiggly Sounds!**




Wiggles Character Buttons

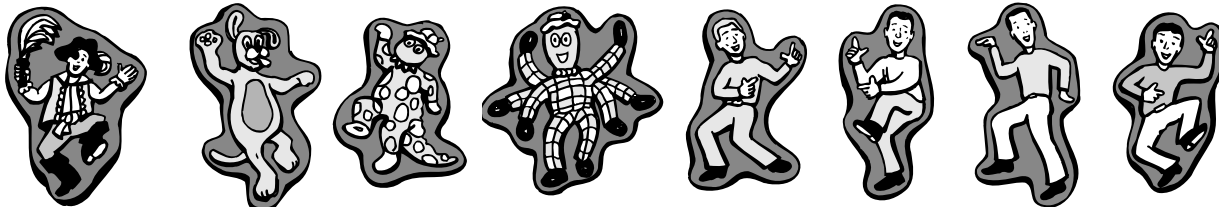

Play and Wiggle (Make your Guitar Wiggle)

STEP 1


Turn the Yellow Knob to the right to turn the guitar "ON".

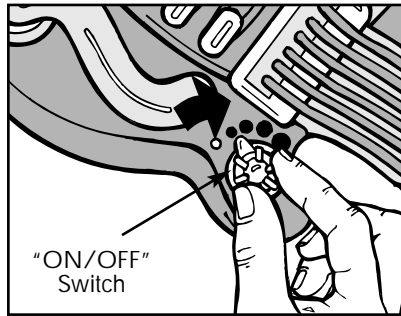

When the switch is turned "ON" you will hear "Get Ready to Wiggle."

STEP 2


Pull down the **Wiggle Bar** to make the neck of the guitar Wiggle.

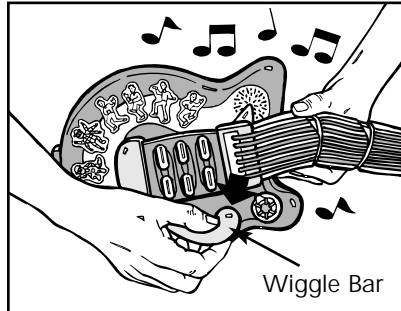

STEP 3

The neck of the guitar will Wiggle for approximately one second and make electric guitar sounds.

All electric guitar sounds can be played over your favorite Wiggle Sounds.

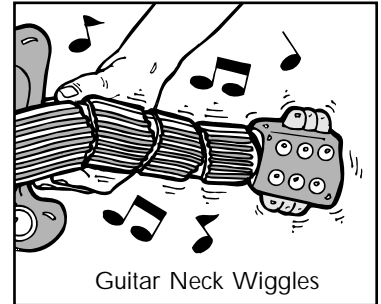


Dance Along

STEP 1


Turn the Yellow Knob to the right to turn the guitar "ON".

When the switch is turned "ON" you will hear "Get Ready to Wiggle."

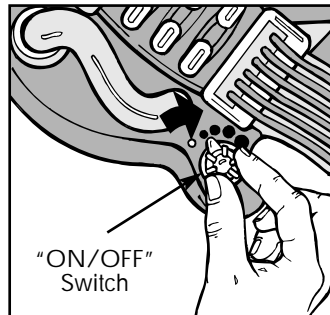

STEP 2

Place Wacky Wiggling Guitar in upright position on a hard flat surface. Guitar will dance through 4 songs and then stops!

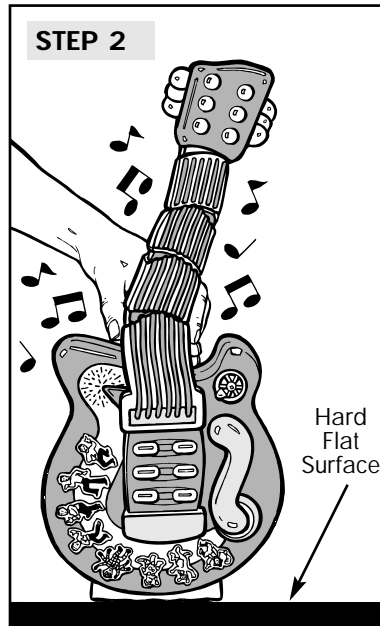

STEP 3

To continue through an additional 4 songs, lift the guitar up and again replace it in an upright position.

